

???????????????? ??? Sony NP-FP50, 7.4 ?, 1600 ???, Li-ion (DV00DV1025)



1371112546.jpg



???????????? Extradigital ??? ????????? Sony NP-FP50 – ??? ????????????? ???????-?????? ??????? ??? ??? ? ??????????, ??????? ?????????????
????????? ? ????????????? ??????. ????????????? Sony NP-FP50 ????????? ??????? ????????????????? ??????????, ??????? ??????????????, ???
?????????? ...

????????: ??? ?????????

????:

???????????? ???:

???????? ??? ? ???:

???? ? ? ??????:

???? ? ? ??????:

????: 952,00 ?.

???? ? ? ??????: 952,00 ?.

?????:

???? ? ?????:

[???????? ?????? ? ???? ?????](#)

???????? ????????????? Extradigital ??? ????????? Sony NP-FP50 – ??? ????????????? ???????-?????? ??????? ??? ??? ? ??????????, ???????
???????????? ?????????? ? ????????????? ??????. ????????????? Sony NP-FP50 ????????? ??????? ????????????????? ??????????, ??????? ??????????????,
??? ????????????? ?????? ??? ???? ????????????? ??????????????, ? ????????????? «???????? ??????» ? ????????????? ??????? ?????????????, ?????? ????????? ?
???????????? ?????????????????????????????????????: Sony NP-FP50?????????: 1600 ??-???? ??????????????: Li-ion?????????????: 7.4 B???????????????? ??????
???????????????????? ??????? ????????????????? Sony: NP-FP50, NP-FP30????????? ? ?????????:Sony: DCR-30, DCR-DVD103, DCR-DVD105, DCR-
DVD105E, DCR-DVD202E, DCR-DVD203, DCR-DVD203E, DCR-DVD205, DCR-DVD205E, DCR-DVD304E, DCR-DVD305, DCR-DVD305E,
DCR-DVD403, DCR-DVD403E, DCR-DVD404E, DCR-DVD405, DCR-DVD405E, DCR-DVD505, DCR-DVD505E, DCR-DVD602, DCR-
DVD602E, DCR-DVD605, DCR-DVD605E, DCR-DVD653, DCR-DVD653E, DCR-DVD703, DCR-DVD703E, DCR-DVD705, DCR-DVD705E,
DCR-DVD755, DCR-DVD755E, DCR-DVD803, DCR-DVD803E, DCR-DVD805, DCR-DVD805E, DCR-DVD905, DCR-DVD905E, DCR-DVD92,
DCR-DVD92E, DCR-HC16, DCR-HC16E, DCR-HC17, DCR-HC17E, DCR-HC18, DCR-HC18E, DCR-HC19E, DCR-HC20, DCR-HC20E, DCR-
HC21, DCR-HC21E, DCR-HC22E, DCR-HC23E, DCR-HC24E, DCR-HC26, DCR-HC26E, DCR-HC28, DCR-HC30, DCR-HC30E, DCR-HC30G,
DCR-HC30L, DCR-HC30S, DCR-HC32, DCR-HC32E, DCR-HC33E, DCR-HC35E, DCR-HC36, DCR-HC36E, DCR-HC39E, DCR-HC40, DCR-
HC40E, DCR-HC40S, DCR-HC40W, DCR-HC41, DCR-HC42, DCR-HC42E, DCR-HC43E, DCR-HC44E, DCR-HC46, DCR-HC46E, DCR-
HC65, DCR-HC85, DCR-HC85E, DCR-HC94E, DCR-HC96, DCR-HC96E, DCR-SR100, DCR-SR100E, DCR-SR30E, DCR-SR40, DCR-
SR40E, DCR-SR50, DCR-SR50E, DCR-SR60, DCR-SR60E, DCR-SR70E, DCR-SR80, DCR-SR80E, DCR-SR90E

???????

??? ????????? ? ???? ??????.

