

Samsung Digimax S730



1371109150.jpg



????, ?????????? ?????????? Samsung Digimax S730 ??? - ?????????? ?????????? ?????????? ??? ?????? - ??? : 2007 ????? -
????????????? ?????????? - 1-????????????? ??????, ?????????????? ?????? ...

?????: ??? ??????

????:

????????? ???:

????????? ??? ? ???:

???? ?? ??????:

???? ?? ??????:

????: 2731,68 ?.

???? ?? ??????: 2731,68 ?.

?????:

???? ?????:

[?????? ?????? ?? ????? ??????](#)

????????? ????, ?????????? ?????????? Samsung Digimax S730 ???

- ?????????? ?????????? ??????????

???? ??????

- ??? : 2007

?????

- ??????????

?????????

- 1-?????????

?????, ?????????????? ??????

- ?????? ?????????? (???) : CCD - ?????????? ?????? (pixel) : 7.2 Megapixels

????????? ??????, ??????

- ????? : 99.80 ?? - ????? : 62.80 ?? - ????? : 25.70 ?? - ??? : 136 ?

?????????, ??????

- ?????? ?? : x 2 - ?????????? ?????????????? ?????????? ??????

?????

- ??? : TFT - ?????? ?????? (???) : 2.5"

????????????? ?????????????? Samsung Digimax S730 ??????????

- ?????????? (pixel) : 7 MP 3072 x 2304, 5 MP 2560 x 1920, 3 MP 2048 x 1536, 0.8 MP 1024 x 768 - ?????????????? ?????? Image : DCF,
DPOF, JPEG, Exif 2.2 - ?????????? ??????

?????????

- ??? : ?????????? - ?????????? (F) : 2.8 - 4.9 - ?????????? Zoom : x 3 - ?????????? Zoom : x 5

?????

- ?????????? - ?????? ?? / ??? : ??????????????, ?????????????? - ?????????? ?????? "?????? ????"

????????? ??????????

- ?????????? - ??????

?????????

- ?????????? ?????? (???? / ???) : 30 - ?????????? (pixel) : 640 x 480, 320 x 240 - ?????????????? ?????? Video : AVI, MPEG4 - ??????????

?????? ????? ?? ?????? - ?????????????? ?????? Audio : WAV
 ?????? Samsung Digimax S730 ??????????????, ?????????????????
 - ?????? (Mb) : 16 Mb
 ?????? ?????????????, ????????? ??
 - ?????????????????? ??????? : MMC, Secure Digital (SD), Secure Digital High-Capacity (SDHC) , ?? 4 Gb
 ?????????????????? ????????????? Samsung Digimax S730 ?????????? ??????, ?????????????????? ??????????
 - PictBridge
 ??????
 - USB : ????? , 2.0 - Audio / Video ????? : NTSC, PAL
 ?????????????? ?????????????, ????????????? Samsung Digimax S730
 - ?????????????????? ????????? : ????? / ?????, ??????

?????????????	7
???????????? ??	3
????????????? ?????????????? TTL	???
????????????? ??????????????	???
????????????? LCD ????????	???
LCD ??????? (?????)	2.5
?????. ?????????????????? ISO	1000
????????? ???????	AA ?????????????
?????. ?????????????? ??????	640x480
?????????????????????????	???
????? ??????? Secure Digital (SD)	??
????? ??????? Compact Flash (CF)	???
????? ??????? Memory Stick (MS)	???
????? ??????? Multi Media Card (MMC)	???
????? ??????? xD-Picture Card (XD)	???
??? (?)	136
?????? (?)	100
?????? (?)	63
?????? (?)	26
	?????????????

??????
 ??? ??????? ?? ???? ??????.