

Sony DSC-W170



1371109396.jpg



???-?????? (???) 1/2,3" ?????????????? Sony ?????? ?????? Cyber-shot DSC-W170 Red ?????? ?????????????? ?????????? 10,1 ?? ??????????

????????: ??? ?????????
?????:
????????????? ?????:

????????? ????? ? ???:

???? ?? ?????????:

???? ?? ?????????:

????: 5275,40 ?.

???? ?? ??????: 5275,40 ?.

?????:

????? ??????:

[?????? ??????? ?? ????? ??????](#)

????????? ???-?????? (???)
1/2,3"
????????????????
Sony
?????? ??????
Cyber-shot DSC-W170 Red
????? ?????????????? ??????????
10,1 ??
?????????
5-25 ??; (????????????? f=35??) 28-140 ??
??? ??????????????
5x
??? ??????????
10x
?????????
1/4-1/1600 ?
????????? ??????????????
?? 10 ??
?????? ??????????????
???
?????????? ??????? ??????
????, ??????? ????, ???????, ?????????????????? ??????????1, ?????????????????? ??????????2, ?????????????????? ??????????3, ????

?????????, ??????
????????? ??????
???, ?????????????? ?????????? ??????, ???????? ?????????????, ??? ??????
??????? ???
???
????????????? ??????????????
Auto, 80, 100, 200, 400, 800, 1600, 3200
?-?????
2,7"; 230 000 ???.
????/???
????/???
????? ? ??????
????? ?????? Memory Stick Duo™, Memory Stick PRO Duo™. Memory Stick PRO Duo High Speed, Memory Stick PRO-HG Duo (??????? ?
? PRO Duo). ?????????? ?????? (15 ??)
?????? (???). ?????????)
JPEG, MPEG1 (3648 x 2736)
?????????
????????????????? ??????, USB 2.0
???????
????????? ??????, ??? N
???????
93,7 x 58 x 24 ??
?????
175 ?
?????????????
????????????? ?????????? ? ??????????
??? ??????????????
www.sony.com

??????:	XC0024724
?????????????:	Sony
?????? (pix):	10,1 ??
??? ?????????:	5x
?????? ???:	???
????? / ???:	???/???
????:	175 ?

?????
?? ?????? ?? ??? ?????.